


NVR not showing live views on VGA/HDMI when logged out

If an NVR is not showing any live video views on the HDMI interface when the user is logged out or not logged in, then the restriction settings on the NVR could be set to not show live video unless a user is logged in.

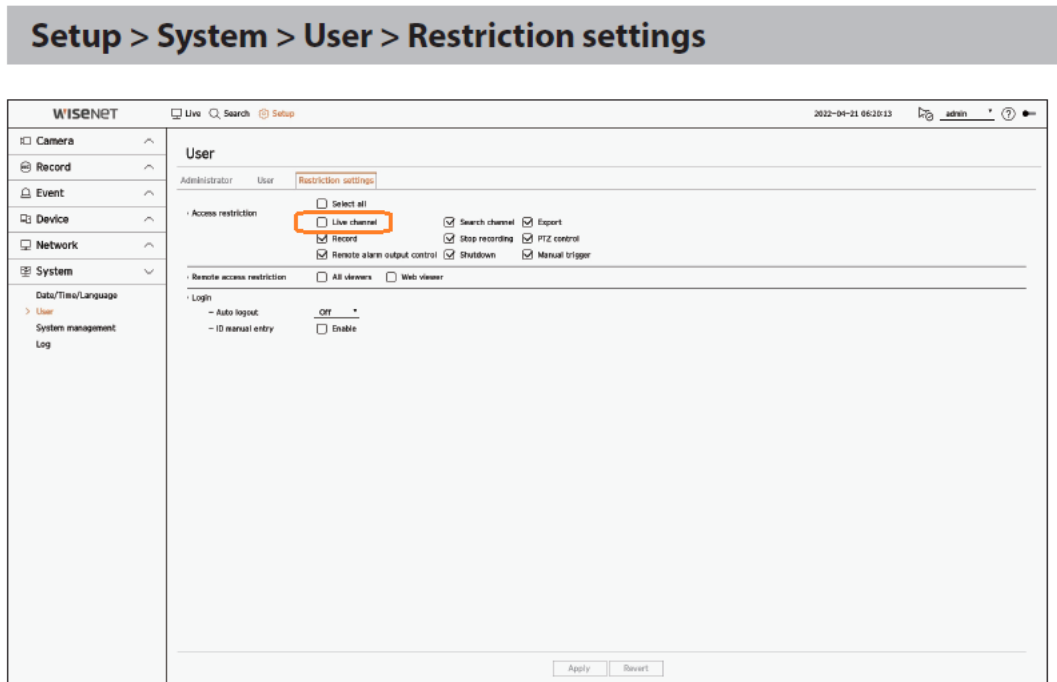

Check that the Live channel option is not ticked under the restriction settings on the NVR